


# MAGURA

HS 33 · HS 22 · HS 11

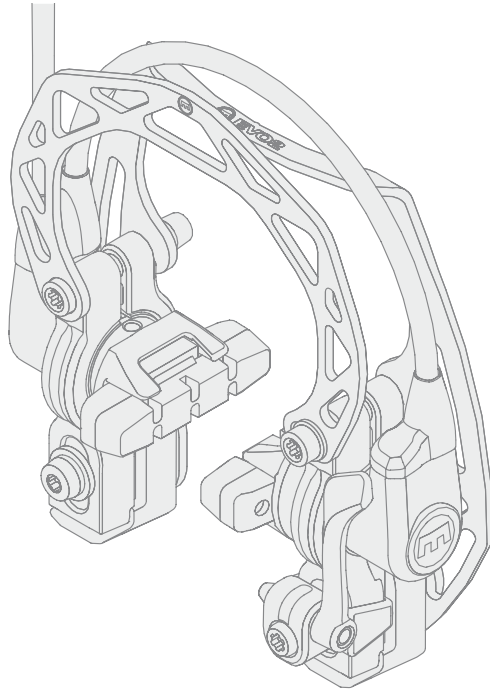

OWNER'S MANUAL



**MAGURA**



**INTRODUCTION**

Preface .....	12
Legend .....	12

**TECHNICAL SPECIFICATIONS**

Specifications.....	13
Dimensions .....	13

**SAFETY**

Intended use .....	14
Basic safety instructions .....	14

**INSTALLATION**

Installing the brake .....	16
General.....	16
Installing brake lever .....	16
Installing brake cylinders 17	
Adjusting brake cylinders 17	
Adjusting quick release....	18
Installing brake booster ...	18
Shortening brake hose.....	18
Adjusting brake levers (reach adjust).....	19

**ON THE MOVE**





Prior to your first ride....	20
Before each ride.....	20
Opening brake for dis-/mounting the wheel	20
Applying brake .....	20
Setting pressure point/ compensating pad wear	20





**MAINTENANCE**




Regular.....	21
Changing brake shoes ...	22
Bleeding and filling brake	22





**THE RULES**







Liability.....	24
Warranty.....	24

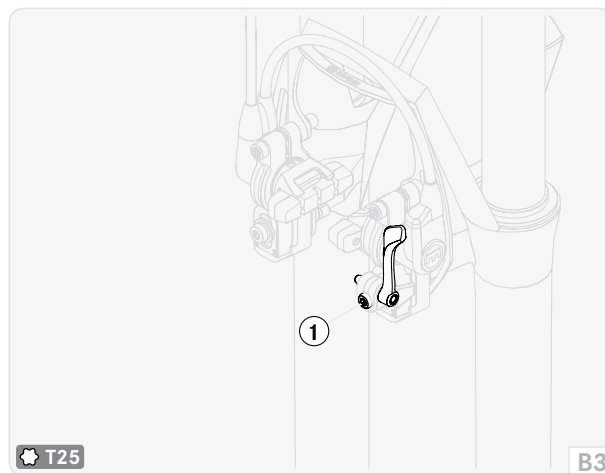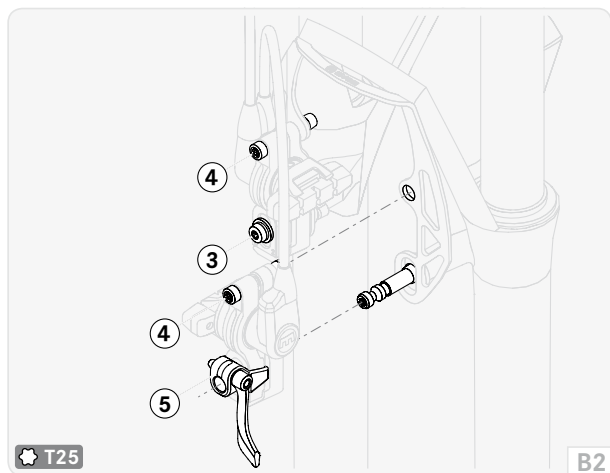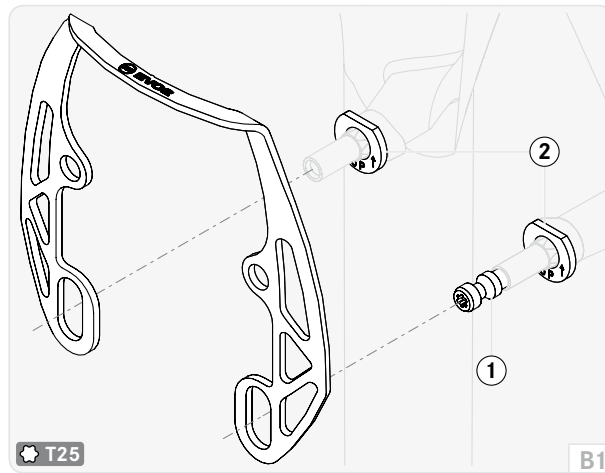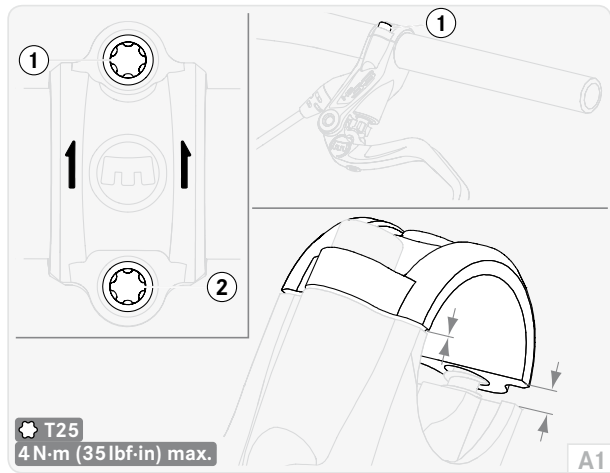

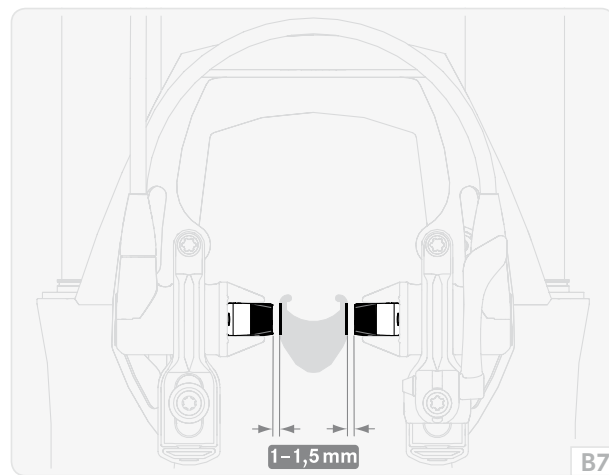
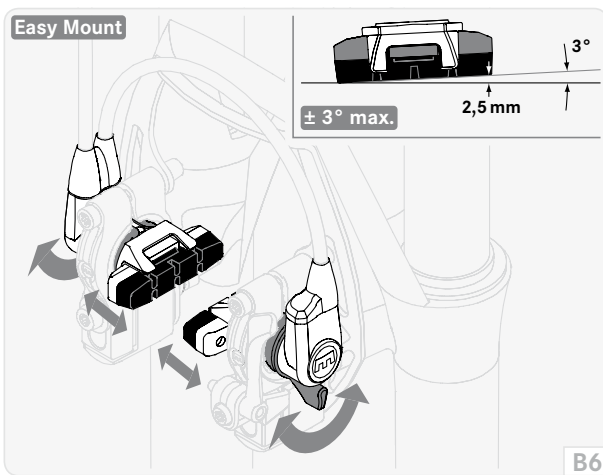
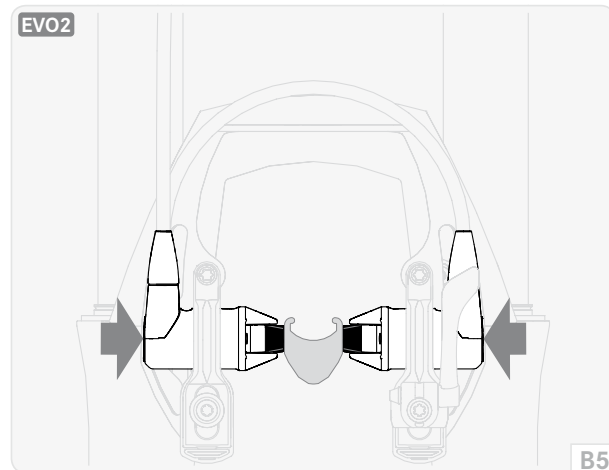
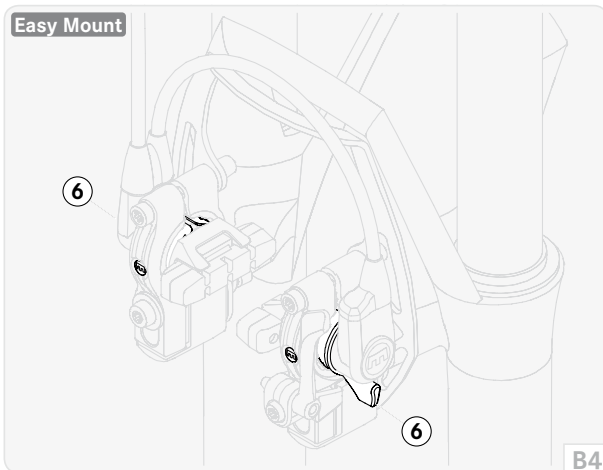


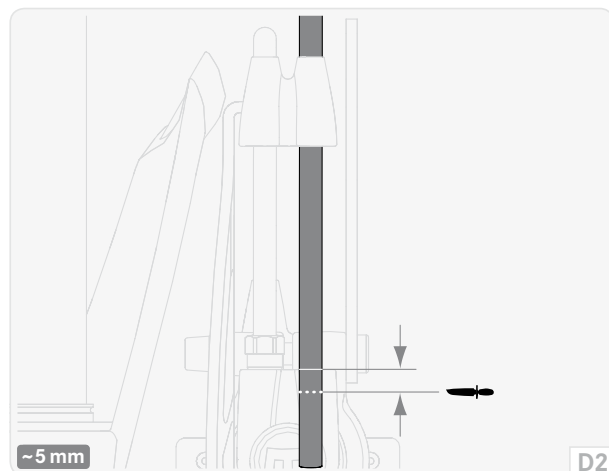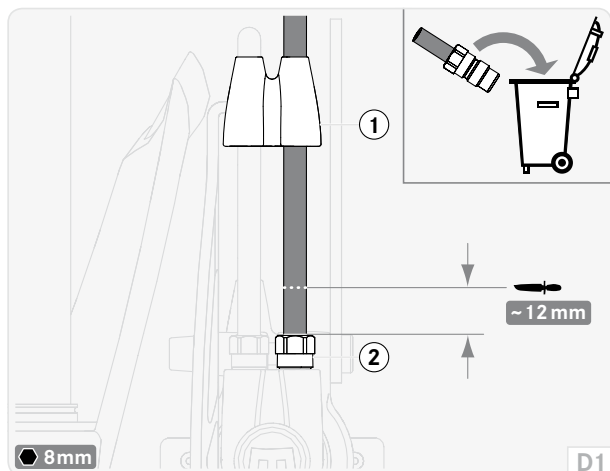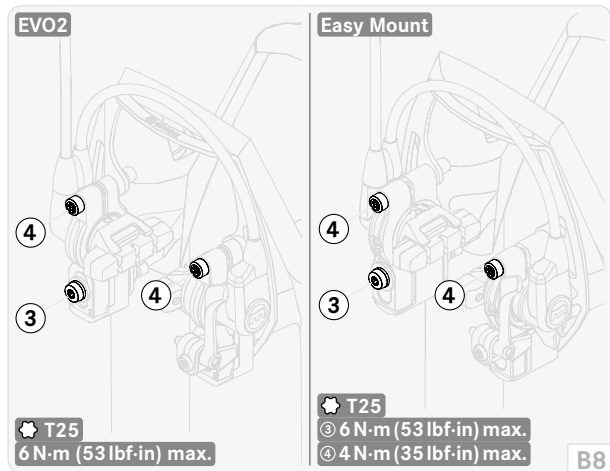

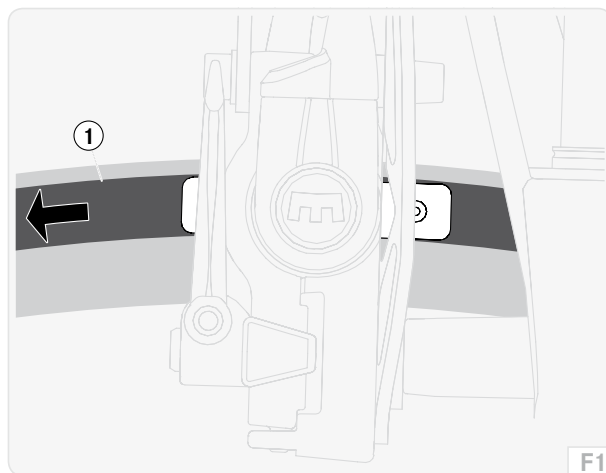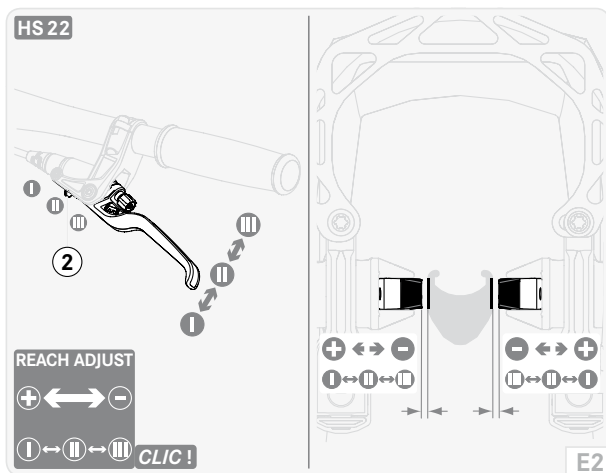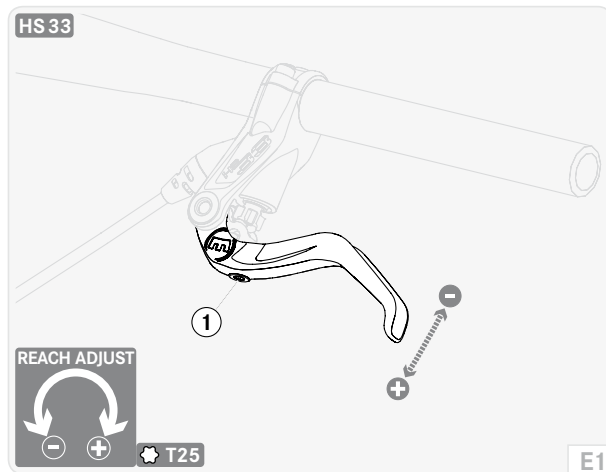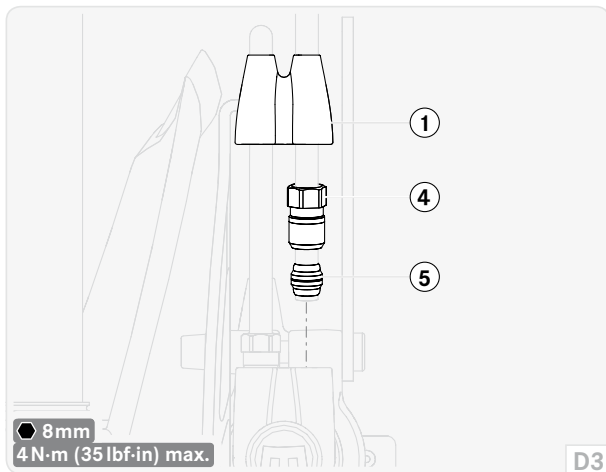


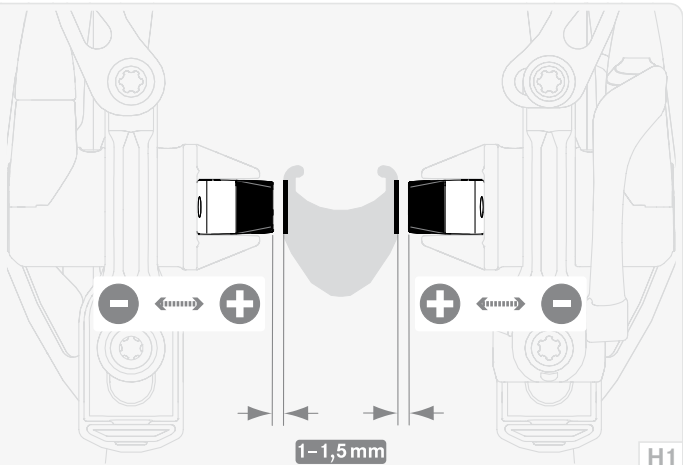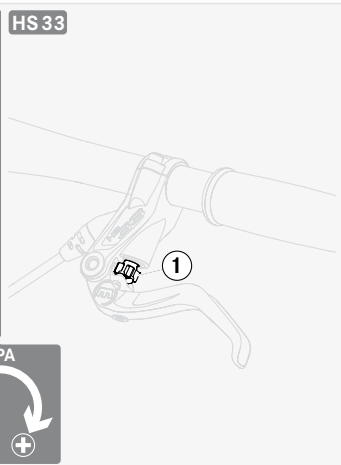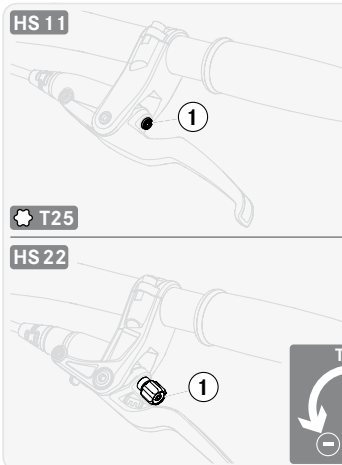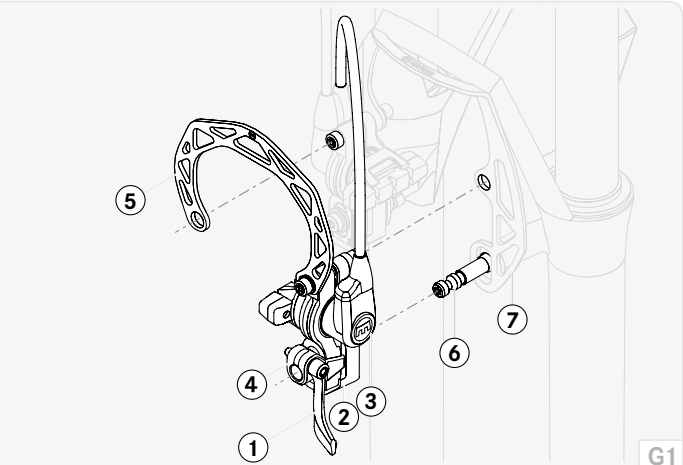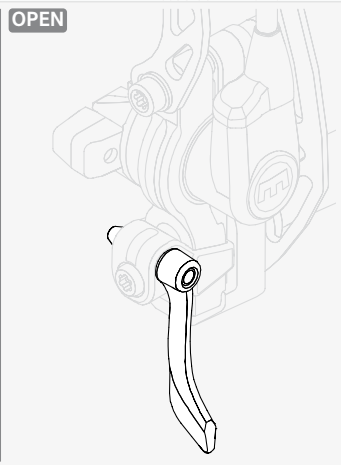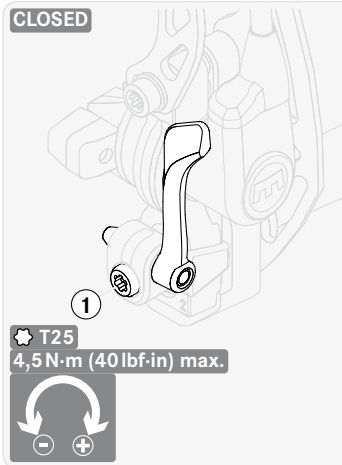



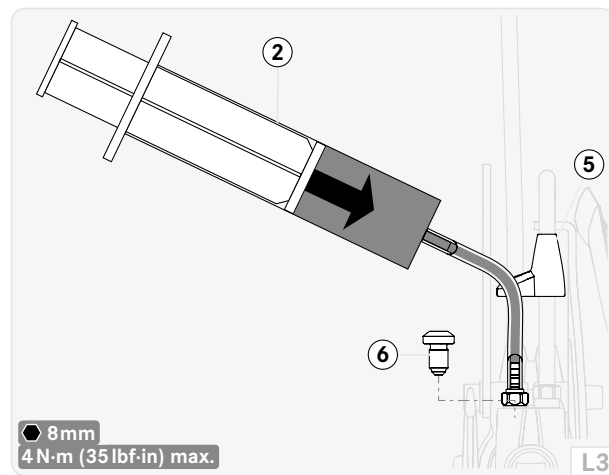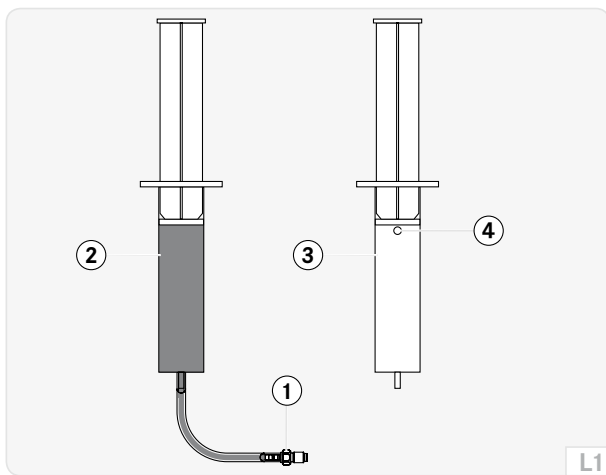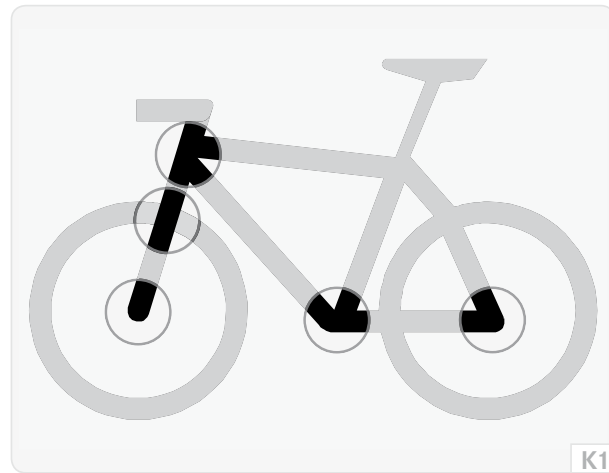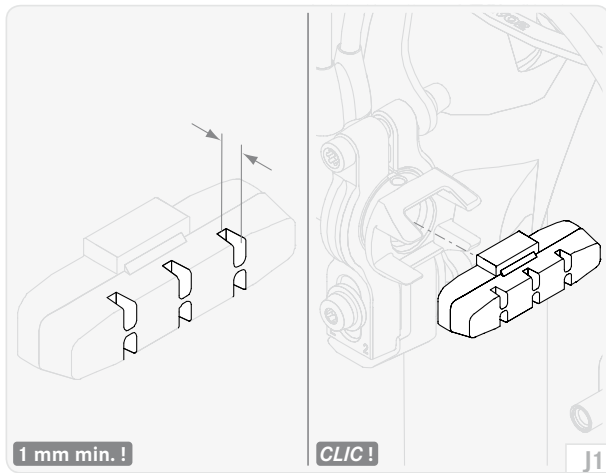


HS 11  
HS 22

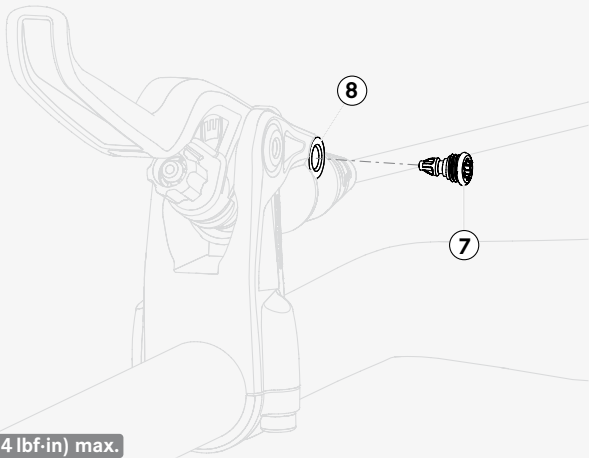

T25  
0,5 N·m (4 lbf·in) max.


HS 33

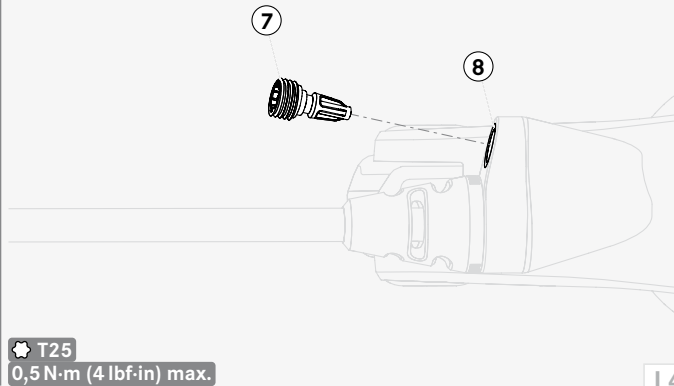


T25  
0,5 N·m (4 lbf·in) max.

L4


HS 11  
HS 22

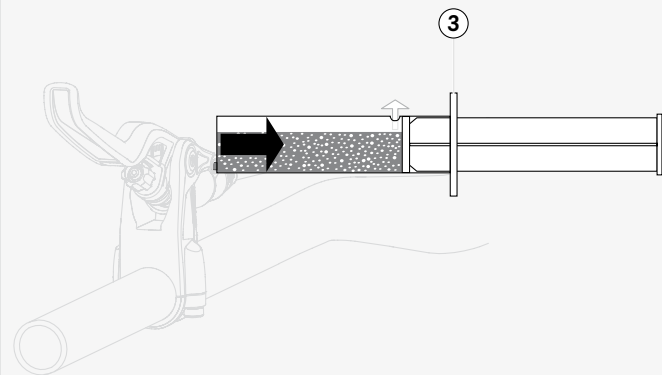

HS 33

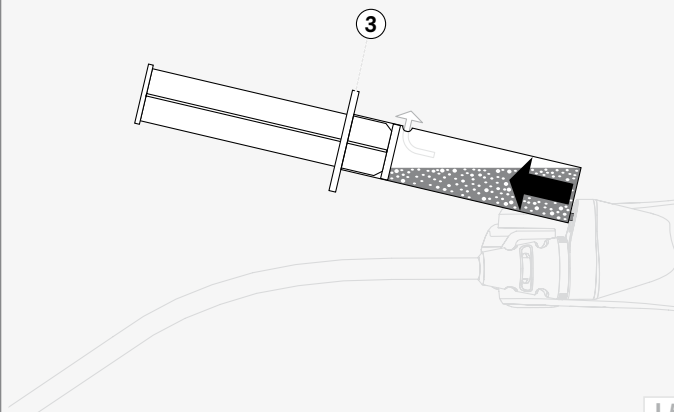

L5

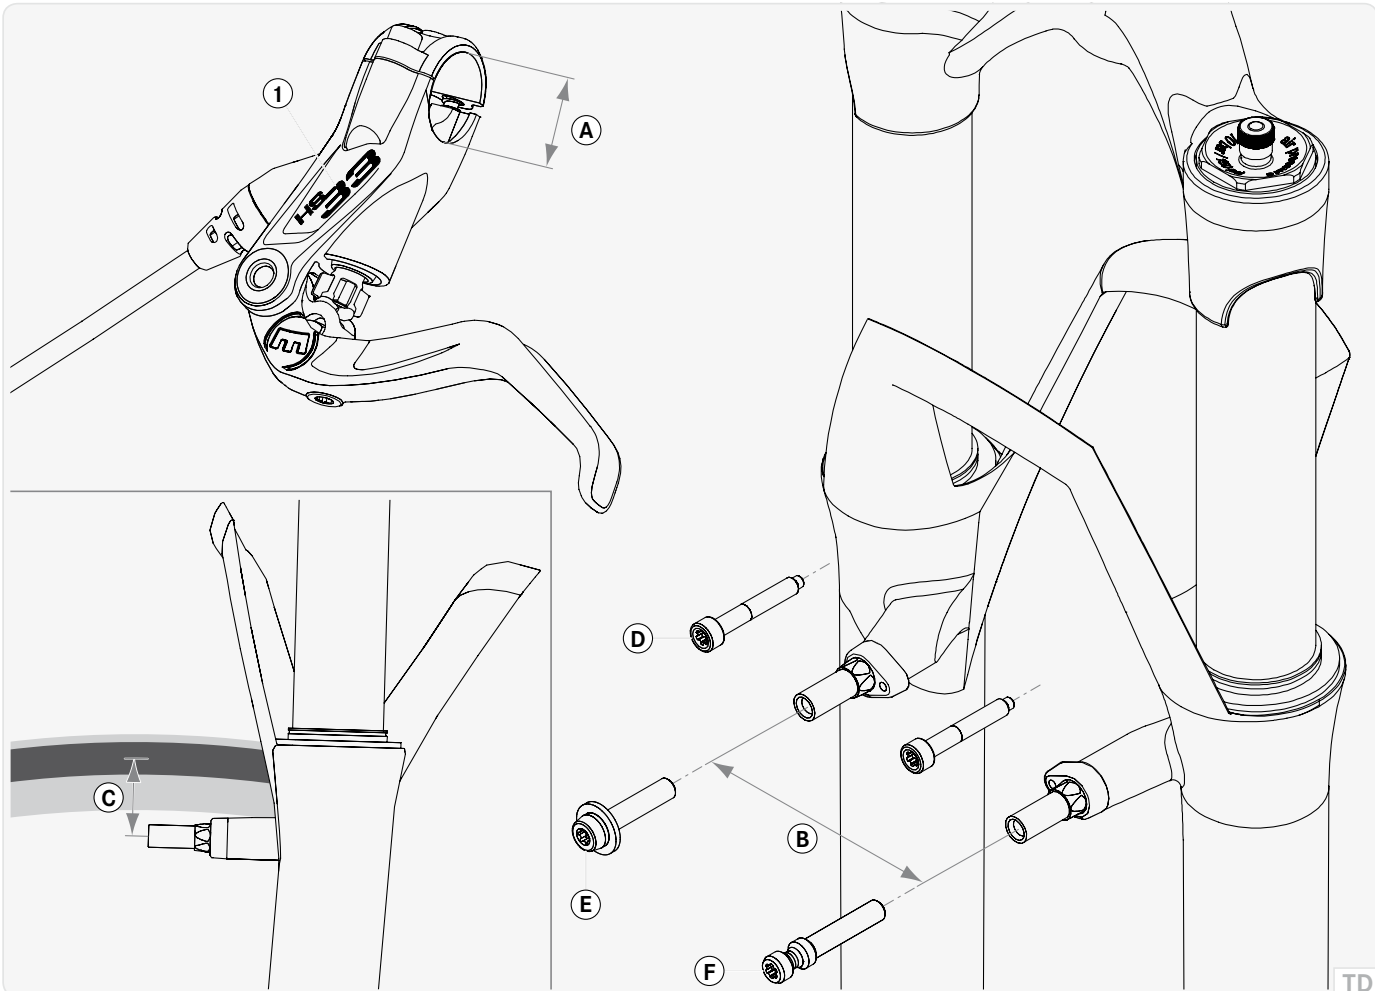

## PREFACE

Congratulations – you have purchased a powerful, low-maintenance MAGURA HS hydraulic rim brake of the latest generation – developed in Germany.

This owner's manual is an integral part of your MAGURA product and gives you details of the required tools, correct installation, safe use, maintenance and setup options.

Please read this manual carefully before you install or use your MAGURA product. Always observe and follow all instructions on installation, use and maintenance provided in this manual and in instructions by third-party manufacturers whose products you use on your bicycle.

Remember that the mechanic who installs your MAGURA product is responsible for the suitability and compatibility of all the components technically linked to your MAGURA product.

**▲ WARNING** Failure to observe the instructions in this manual can lead to serious or fatal accidents.

You can find the figures that this manual refers to in the folder in the graphic section.

The figures in this manual may differ slightly from your MAGURA product, however, the required steps are the same for all types and variants – if not stated to the contrary.

The type name **(1)** of your MAGURA brake can be found on the brake lever. **[TD]**

Please note that the braking characteristics of your bicycle may be changed by installation of the new brake.

Familiarize yourself with any changes in the braking characteristics of your bicycle during the first few rides.

## LEGEND

**▲ WARNING** ... warns you about a dangerous situation which can lead to serious or fatal injury if not avoided.

**▲ CAUTION** ... warns you about a dangerous situation which can lead to minor or slight injury if not avoided.

**NOTICE** ... warns you about the risk of material damage.

**⚠ NOTICE – ENVIRONMENT** ... warns you about the risk of environmental pollution.

⊙ ... indicates how you can avoid a dangerous situation or risk of material damage or environmental pollution.

☞ ... prompts you to perform an action.

⇒ ... shows consequences or requirements.

① ... gives you additional information or tips.

③ ... refers to the corresponding item number in a figure.

[B2] ... refers to the corresponding figure in the graphic section.

**HS 11** This symbol means that notices or figures exclusively apply to the corresponding type or variant.

Keep this manual for other users of your MAGURA product. Make sure that each user reads, understands and observes this manual.

If you sell or give away your MAGURA product, be sure to hand over this manual to the new owner.

Visit **www.magura.com** for more tips and information on your MAGURA product. You can also exchange experiences and ask questions, etc. on the MAGURA Forum.

We wish you great success and a great ride

*Your MAGURA Team*

## SPECIFICATIONS

Type name	HS 11	HS 22	HS 33
Brake lever		hydraulic (MAGURA)	
Brake fluid		MAGURA <i>Royal Blood</i> (mineral oil)	
Applications		Street, tour • AllMountain • XC, XC Race	

## DIMENSIONS

Type name			HS 11	HS 22	HS 33
Clamping Ø brake lever (A)				22 <sup>+0.3/-0.1</sup>	
Cantilever socket distance (B)	[TD]			80 <sup>±2.0</sup>	
Cantilever socket brake track area min.–max. (C)				22–32	
Ø brake hose		mm		5	
Rim width min.–max.				18–28	
Tire width max.				64 [2.5"]	

Adapter system			EV02	EASY MOUNT <sup>1</sup>
Adapter screw (D)				M5×33
Socket screw (E)	[TD]	mm	M6×17.5 – screwlock blue	M6×26 – screwlock red
Quick release screw (F)			M6×19 – screwlock blue	M6×28 – screwlock red

<sup>1</sup> *Easy Mount* is the name of a MAGURA adapter variant – indicated by the MAGURA logo and adjusting ring. [B4]

## INTENDED USE

### ⚠ WARNING

Any use other than the intended use can lead to accidents that cause serious or fatal injury.

MAGURA HS rim brakes are designed and intended exclusively

- for installation on conventional touring and trekking bikes, E-Bikes\* and mountain bikes with forks and frames that possess suitable mounting fixtures (cantilever sockets).
- for installation on conventional touring, trekking and mountain bike handlebars.
- for use with wheels that have rims with the corresponding brake track areas.
- for the specified application – see **SPECIFICATIONS**, page 13.

MAGURA rim brakes must never be combined and used with components (brake lever, brake body, etc.) of MAGURA disc brakes!

\* Taking account of relevant statutory regulations.

## BASIC SAFETY INSTRUCTIONS

Always remember that riding a bicycle entails risk both for the rider and other road users, and for the bicycle and its components. Despite the use of safety gear and complete safety equipment, accidents that cause serious or fatal injury can occur.

Always use your common sense and avoid any unreasonable actions!

## Installation & Maintenance

### ⚠ WARNING

**Danger of accident due to damaged brake caused by incorrect or impermissible installation work.**

- Never overestimate your technical capabilities. Commission a specialist workshop for bicycles or an authorized MAGURA service centre with all installation and maintenance work. This is the only way to ensure that work is conducted in a professional manner.
- Never make any changes (e. g. grinding, painting, etc.) to your MAGURA product that are not specifically permitted and described in the owner's manual.
- Always observe all min./max. values stated – see **TECHNICAL SPECIFICATIONS**, page 13.
- For assembly steps that require a specific tightening torque for a screw union, always use a torque wrench set up for the required torque.
- Always maintain your bicycle in technically perfect working order.

**Danger of accident due to improper accessories.**

- Use only MAGURA original parts.
- Use only original MAGURA brake shoes and for bleeding and filling use MAGURA *Royal Blood* (mineral oil).
- Never use DOT brake fluid.

## On the Road

### **WARNING**

#### **Danger of accident due to component failure.**

- Before each ride, make sure that the quick release or screw system on your wheels is fitted correctly and that your wheels will not work loose.
- Before each trip, make sure your wheels move freely and do not contact the brake pads at any point.
- Before each ride, make sure that the handlebar and stem are correctly fitted and will not twist.
- Before each trip, make sure that both brakes are closed – see **OPENING BRAKE FOR DIS-/MOUNTING THE WHEEL**, page 20.
- Before each ride, make sure that your brakes operate correctly – the pressure point must be clearly perceptible and does not change when the brake lever is pulled. Make sure that the brake pads are in full contact with the brake track area and do not contact the tires.
- Before each trip, make sure that your brakes are not damaged in any way, including with the brake lever pulled (e. g. traces of oil, cracks, etc.).
- Before each trip, make sure that the brake track area of your wheels and the brake pads have not reached their wear limits and are free from lubricating substances (oil, grease, silicone, wax, etc.).
- After each crash, check your brake for damage and make sure it operates correctly.
- Never use your brake if damage (e. g. traces of oil, cracks, etc.) is visible, you can hear unusual noises or if you have any doubts about its integrity. In this case, have your brake checked in a specialist bicycle workshop or directly by MAGURA Service.

#### **Danger of accident due to improper behaviour or improper equipment during riding.**

- Always match your speed to the current road and weather condi-

## **SAFETY**

tions. Particularly in wet conditions your braking distance will be significantly increased – always ride cautiously and be ready to brake.

- Always use the front and rear wheel brakes simultaneously.
- Always observe the traffic regulations in the country where you are riding (lighting, reflectors, etc.).
- When riding, always wear a high quality (e.g. ANSI certified), undamaged cycling helmet and clothing that fits snugly but does not impair your actions.
- Only ride your bicycle if you are in good physical condition and your bicycle and all of its components are in perfect working order.

### **Transport & Storage**

#### **WARNING**

#### **Danger of accident due to damaged components.**

- Make sure that brake hoses cannot be kinked when you pack your bicycle.
- Do not store your MAGURA brake at below -15°C (5°F) or above 55°C (131°F) ambient temperature.

- ① It is not necessary to drain your MAGURA brake before transporting it by air.

### **Protection of the environment**

#### **NOTICE – ENVIRONMENT**

**Dispose of used lubricants and oil correctly and in accordance with the legal requirements – never discard them in the sewage system or in the ground.**

## INSTALLING THE BRAKE

### General

- ① The following assembly steps always refer to the front wheel brake, but they are identical for the rear wheel brake unless otherwise specified.
- ☞ Make sure that the dimensions of the handlebar (clamping  $\emptyset$  brake lever), cantilever sockets and wheels (brake track areas) fit your brake – see **TECHNICAL SPECIFICATIONS**, page 13.

### ⚠ WARNING

**Danger of accident due to restricted or blocked steering movement because brake hose is too short or too long.**

- Make sure that there is full steering movement in both directions.
- Keep the length of the brake hose as short as possible and as long as necessary.

### NOTICE

**Loss of oil when the brake hose is removed/disconnected.**

- Do not actuate the brake lever if the brake hose is disconnected.
- Handle the open brake hose carefully – do not shake it, knock it or hit it.
- Have clean, absorbent and lint-free cloths ready – wipe any leaking oil away immediately.

**Unusable brake hose – because it is too short.**

- Before shortening the brake hose make sure that the handlebar and stem are in their final position and do not need to be raised, extended or adjusted in any way.
- If required, allow a little longer at first – you can always shorten it a bit more but you can't extend it!

- ① A thin wire may be helpful for inserting the brake hose through the bicycle frame.  
Run it in the opposite direction through the outlet to the inlet of the frame and fix it to the end of the brake hose with adhesive tape. However, do not insert the wire into the brake hose – oil loss!  
Carefully pulling with the wire and pushing the brake hose at the same time will make it easier to find the outlet.
- ① Before installing your brake decide which brake lever (right or left) you want to allocate to your front wheel or rear wheel brake.
- ① When installing the brake hose for the rear wheel brake use the practical MAGURA hose holder – available in different models.
- ① Installation and setting of the brake cylinders can be made significantly easier if the corresponding wheel is mounted in the frame or fork – preferably without a tire fitted.

### Installing brake lever

Important – see **General**, page 16!

- ☞ Push the brake lever onto the handlebar.
- ⇒ The arrows on the clamp point upwards! [A1]
- ☞ First tighten the upper clamping screw (1), then the lower one (2) with tightening torque of **4 N·m (35 lbf·in)**.
- ⇒ The clamping screw is in contact at the top, there is a gap at the bottom! [A1]
- ① The brake lever can be rotated by hand when forced.  
It is advantageous if the brake lever can rotate in the event of a fall. This reduces the danger of irreparable damage to the handlebar.



## INSTALLATION

### Installing brake cylinders

Important – see **General**, page 16!

#### **▲ WARNING** Danger of accident due to component failure.

- Make sure that the correct screws are available, in the correct length – see **DIMENSIONS**, page 13.
- ☞ Screw the quick release screw (1) into the right cantilever socket (as seen from above) – by 10–12 turns at first. [B1]
- ☞ Place spacer discs (2) on the cantilever sockets – max. 1 spacer disc per cantilever socket, chamfer upwards!
- ☞ Push the mounting plate onto the cantilever sockets. [B1]
- ⇒ The upper curve of the mounting plate points forwards (riding direction).
- ☞ Place the left brake cylinder (2 connecting lines) on the left cantilever socket (as seen from above) and mounting plate – secure with a washer and socket screw (3). [B2]
- ☞ Place the right brake cylinder with open quick release skewer (5) (OPEN) onto the right cantilever socket/quick release screw and mounting plate – set the quick release lever to the up position (CLOSED). [B3]
- ☞ Screw in the socket screw (3), adapter screws (4) and quick release screw (1) until the brake cylinder, adapter and any adjusting rings (6) can just still be moved or turned. [B2]/[B4]

### Adjusting brake cylinders

- ① **HS22** The reach adjust (brake lever) affects the position of the brake pads and the pressure point – as a result, adjust the reach **before** the brake cylinders!
- ☞ Install the wheel into the dropouts as far as it will go – preferably without tires.
- ☞ Make sure that the rim is located exactly in the middle between the fork blades or seat stays of the rear triangle – centre the wheel if necessary.

#### **NOTICE** Restricted adjustment capability.

- The exclusive purpose of the pressure point adjusting screw (TPA) is to compensate for brake pad wear. Do not use the TPA for the basic setting of the brake cylinders – the brake shoes must be fully advanced. Otherwise there might not be sufficient adjustment travel available later on.
- ☞ Make sure that the pressure point adjusting screws (TPA) (1) are unscrewed to the stop (-). [H1]
- ⇒ Brake shoes are fully advanced.
- ⇒ **HS22** Brake shoes are fully advanced, but are located further inward in brake lever positions II or III. [E2]
- ☞ **EVO2** Push brake cylinders inwards until the brake pads are in full, flat contact with the brake track area. [B5]
- ☞ **Easy Mount** Rotate adjusting rings until the brake pads are in full, flat contact ( $\pm 3^\circ$  max.) with the brake track area. [B6]
- ① **Easy Mount** If the brake pads are at a slight angle within the range  $\pm 3^\circ$ , this has no effect on the function of the brake.
- ☞ Move the adapter up or down if necessary until the top edges of the brake pads are 1–2 mm below the edge of the rim.
- ⇒ Brake pads are in full, flat contact with the brake track area.
- ⇒ Brake pads are aligned exactly parallel with the rim.
- ⇒ Brake pads cannot come into contact with the tires.
- ⇒ Adapters are at the same height.

#### **Easy Mount**

- ☞ Rotate adjusting rings until a gap of 1–1.5 mm is produced on both sides between the brake pad and brake track area. [B7]
- ☞ Tighten adapter screws (4) with tightening torque of **4 N·m (35 lbf·in)**. Tighten the socket screw (3) with tightening torque of **6 N·m (53 lbf·in)** [B8] and set the quick release skewer to the definitive pressure – see **Adjusting quick release skewer**, page 18.

## EVO2

- ☞ Pull the brake lever **carefully**.
- ⇒ Brake shoes retract.
- ⇒ Brake cylinders are pushed outwards.
- ☞ **Carefully** pull the brake lever and release until a gap of 1–1.5 mm is produced on one side between the brake pad and brake track area. [B7]
- Then, on this side: tighten the adapter screw (4) and socket screw (3) with tightening torque of **6 N·m (53 lbf-in)** [B8] or set the quick release skewer to the definitive pressure – see **Adjusting quick release skewer**, page 18.
- ☞ **Carefully** pull the brake lever and release until a gap of 1–1.5 mm is also produced on the other side between the brake pad and brake track area. [B7]
- Then, on this side: tighten the adapter screw (4) and socket screw (3) with tightening torque of **6 N·m (53 lbf-in)** [B8] or set the quick release skewer to the definitive pressure.

### Adjusting quick release skewer

- ☞ Operate the quick release lever – open/close.
- ① If the quick release lever can be closed too easily, the quick release screw (1) must be adjusted [G1]:
- ☞ Move the quick release lever up (CLOSED).
- ☞ Screw in the quick release screw by ¼ turn clockwise.
- ☞ Operate the quick release lever – open/close.
- ☞ Repeat the procedure if necessary.

### Installing brake booster

- ☞ Unscrew the right adapter screw (4) (as seen from above).
- ☞ Push the brake booster onto the left adapter screw.
- ☞ Secure the brake booster with the adapter screw (4) and washer. [C1]
- ☞ **EVO2** Tighten the right adapter screw (4) with tightening torque of **6 N·m (53 lbf-in)**.
- ☞ **Easy Mount** Tighten the right adapter screw (4) with tightening torque of **4 N·m (35 lbf-in)**.

### Shortening brake hose

Important – see **General**, page 16!

#### **NOTICE** Oil loss.

- ⊙ Make sure that the pressure point adjusting screws (TPA) (1) are unscrewed to the stop (-). [H1]
- ⊙ **HS22** Make sure that the slide (2) (reach adjust) on the brake lever is set to position I. [E2]
- ☞ Push the double hose cover (1) upwards. [D1]
- ☞ Cut off the brake hose approx. 12 mm before the end of the hose – use a MAGURA hose cutter if required.
- ☞ Twist the barbed fitting (2) out of the brake cylinder with the remains of the hose.
- ⇒ The cut-off barbed fitting cannot be reused!
- ☞ Hold the end of the brake hose to the brake cylinder. [D2]

#### **NOTICE** Unusable brake hose – because it is too short.

- ⊙ Calculate the insertion depth (~5 mm) of the brake hose in the brake cylinder. [D2]
- ☞ Mark the cut on the brake hose.
- ☞ Place the brake hose on a solid surface (wood, plastic, etc.) and cut at right angles with a sharp blade – if required use the MAGURA hose cutter.

- ☞ Place the sleeve nut (4) and olive (5) on the brake hose. [D3]
- ☞ Insert the brake hose into the brake cylinder to the stop and hold in position.
- ☞ Screw the sleeve nut (4) into the brake cylinder and tighten with tightening torque of **4 Nm (35 lbf-in)**.
- ☞ Remove any oil residues thoroughly.
- ☞ Pull and hold brake lever.
- ☞ Make sure that all connections are tight.
- ☞ Push the hose cover (1) downwards.
- ☞ Set the pressure point – see **SETTING PRESSURE POINT/COMPENSATING FOR PAD WEAR**, page 20.
- ☞ **HS22** Move the brake lever to the customary position (reach)
  - see **Adjusting brake levers (reach adjust)**, page 19.

## INSTALLATION

### Adjusting brake levers (reach adjust)

- ⓘ You can adjust the position (reach) of the brake levers of your MAGURA HS according to your requirements. This adjustment does not affect the position of the brake pads or the pressure point of the brake – exception: **HS22** !

#### **HS33**

- ☞ Screw the adjusting screw (1) out (-). [E1]
- ⇒ Brake lever moves closer to the handlebar.
- ☞ Screw the adjusting screw in (+).
- ⇒ Brake lever moves further away from the handlebar.

#### **HS22**

- ☞ Hold down brake lever lightly. [E2]
- ☞ Adjust slide (2) outwards (-) to position II or III.
- ⇒ Brake lever moves closer to the handlebar.
- ⇒ Brake pads move closer to the brake track area.
- ⇒ Pressure point on the brake lever acts at an earlier point.
- ☞ Adjust slide inwards (+) to position II or I.
- ⇒ Brake lever moves further away from the handlebar.
- ⇒ Brake pads move away from the brake track area.
- ⇒ Pressure point on the brake lever acts at a later point.
- ☞ If necessary, adjust brake cylinders after adjusting the reach
  - see **Adjusting brake cylinders**, page 17.
- ☞ Set the pressure point if required
  - see **SETTING PRESSURE POINT/COMPENSATING FOR PAD WEAR**, page 20.

- ⇒ All installation work is complete – the brake is ready for use.

- ① Take some time to familiarize yourself with your new MAGURA brake – preferably away from traffic.

### PRIOR TO YOUR FIRST RIDE

- ☞ Thoroughly degrease the brake track area of the rims and brake pads using brake cleaner or spirits.
- ① New brake pads develop their final braking force during the bedding-in phase.

**⚠ WARNING** Danger of accident due to ill-considered operation of the brake system.

- Make yourself familiar with the arrangement of the brake levers. As a rule, the brake lever for the front wheel brake is fitted on the left side – have the arrangement changed if required.
- Make yourself familiar with the higher braking action of MAGURA HS away from road traffic.

### BEFORE EACH RIDE

**⚠ WARNING** Danger of accident due to brake failure.

- Make sure that the quick release skewers of both brakes are closed (CLOSED)[G1] – SEE APPLYING BRAKE, PAGE 20.
- Pull and hold the brake lever and check:  
No oil is leaking from any part of the brake system.  
Brake pads are in full contact with the brake track area (1)[F1].  
Pressure point is clearly noticeable and does not change.
- Make sure that the rims and the brake pads are intact and free from grease/oil.

**⚠ WARNING** Danger of accident due to bursting tires.

- Make sure that the brake pads cannot contact the tyres.

### OPENING BRAKE FOR DIS-/MOUNTING THE WHEEL

- ☞ Move quick release lever (1) down (OPEN). [G1]
- ☞ Remove adapter (2) with brake cylinder (3), quick release skewer (4) and brake booster (5), if fitted, from cantilever socket (6) and mounting plate (7).
- ⇒ The wheel can be mounted or dismounted.

### APPLYING BRAKE

- ☞ Push adapter (2) with brake cylinder (3), quick release skewer (4) and brake booster (5), if fitted, onto cantilever socket (6) and mounting plate (7). [G1]
- ☞ Make sure that all components are correctly connected.
- ☞ Move quick release lever (1) up (CLOSED).
- ① If the quick release lever can be closed too easily, the quick release screw (1) must be adjusted [G1]:
- ☞ Move quick release lever down (OPEN).
- ☞ Screw in the quick release screw by ¼ turn clockwise.
- ☞ Move the quick release lever up (CLOSED).
- ☞ Repeat the procedure if necessary.
- ⇒ The brake is ready for use.

### SETTING PRESSURE POINT/COMPENSATING FOR PAD WEAR

- ☞ Screw the adjusting screw (TPA) (1) in (+) (1 turn). [H1]
- ⇒ Brake pads move closer to the brake track area (approx. 0.5 mm).
- ⇒ Pressure point on the brake lever acts at an earlier point.
- ① The MAGURA brake pads should be regarded as worn when the depth of the indentations is less than 1 mm. [J1]
- ☞ If the brake shoes have damaged or worn brake pads, replace them with new ones.

### REGULAR

- ① How frequently you need to maintain your MAGURA product depends on how often you use it, but also on weather conditions. Perform the following maintenance steps more frequently if you use your bicycle in extreme conditions (rain, dirt, high mileage, etc.).

If you are a frequent user, also consider the fact that this exposes your MAGURA product to more wear and thus requires more frequent maintenance intervals and checks.

#### **NOTICE** Corrosion and material damage due to water penetration.

- ⦿ Never use a pressure or steam cleaner to clean your bicycle – the seals on your bicycle components are not built to withstand this pressure.
- ⦿ You should even exercise care if you use a water hose. Never point the water jet directly at seal areas. [K1]
- ☞ Clean the brake and brake track areas with water, detergent and a brush.
- ☞ Clean brake pads and brake track areas on the wheels with suitable degreasers (e.g. brake cleaner, white spirit, etc.).
- ☞ Make sure that the brake pads are free from foreign material (stones, glass shards, etc.). Remove any materials.  
If the brake shoes have damaged or worn brake pads, replace them with new ones – see **Changing brake shoes**, page 22.
- ① The MAGURA brake pads should be regarded as worn when the depth of the indentations is less than 1 mm. [J1]
- ☞ Make sure that the brake track areas on your wheels have not reached their wear limits. Replace the rims with new ones if required.
- ☞ Make sure that the brake responds immediately when the brake lever is pulled.  
Bleed the brake if necessary – see **BLEEDING AND FILLING BRAKE**, page 22.

- ☞ Make sure that the pressure point is clearly defined – not spongy – and remains constant.  
Bleed brake if necessary – see **BLEEDING AND FILLING BRAKE**, page 22.
- ☞ Make sure that the brake pads are in full contact with the brake track area [1] and do not contact the tires. [F1]
- ☞ At regular intervals, check and if necessary tighten the screws on the brake lever, cantilever socket and adapter. [A1]/[B8]
- ☞ At regular intervals, check the clamping of the quick release lever – see **APPLYING BRAKE**, page 20.

## CHANGING BRAKE SHOES

- ⚠ **WARNING** Danger of accident due to brake failure caused by faulty installation.
  - Use only original MAGURA brake shoes appropriate for your rim type.
  - ① There are 4 different original MAGURA brake pad blends for aluminium rims:
    - Black** – standard for non-coated rims,
    - Red** – high-grip blend for non-coated rims,
    - Grey** – standard for anodised/coated rims,
    - Green** – high-grip blend for anodised/coated rims.
  - ↻ Screw the adjusting screw (TPA) (1) on the corresponding brake lever out as far as the stop (-). [H1]
  - ↻ Open the brake – see **OPENING BRAKE FOR DIS-/MOUNTING THE WHEEL**, page 20.
  - ↻ Remove the wheel.
  - ↻ Pull off worn brake shoes. [J1]
  - ↻ Clean the brake shoe holders.
  - ↻ Push on new brake shoes – allow them to engage.
  - ↻ Install the wheel.
  - ↻ Apply the brake – see **APPLYING BRAKE**, page 20.
- ⚠ **WARNING** Danger of accident due to brake failure.
  - Pull and hold the brake lever and check:
    - No oil is leaking from any part of the brake system.
    - Brake pads are in full contact with the brake track area (1) [F1].
    - Pressure point is clearly noticeable and does not change.
- ⚠ **WARNING** Danger of accident due to bursting tires.
  - Make sure that the brake pads cannot contact the tires.
  - ↻ Set the pressure point – see **SETTING PRESSURE POINT/COMPENSATING FOR PAD WEAR**, page 20.

## BLEEDING AND FILLING BRAKE

- ① EBT (Easy Bleed Technology) makes it easy to bleed the brake.
- ① The only difference between bleeding and filling – if any – is the amount of oil required – the procedure is identical.
- ① Always fill at the brake cylinder, never at the brake lever!
- ⚠ **NOTICE** Loss of oil and irreparable damage to the braking system.
  - Open the screw plugs for bleeding and filling only.
  - Use MAGURA *Royal Blood* (mineral oil) exclusively for bleeding and filling – never DOT brake fluid.
- ① Because MAGURA *Royal Blood* does not age, it is not necessary to bleed or refill your MAGURA brake regularly. Do this only if one of the following reasons requires it:
  - ⇒ The brake does not respond immediately when the brake lever is actuated.
  - ⇒ Pressure point is not clearly defined, it is spongy or does not remain constant.
  - ⇒ After changing the brake hose.
- ① To bleed or fill your MAGURA brake you will need the MAGURA *Service Kit* or the MAGURA *Pro Bleed Kit* – available from dealers.
  - ↻ Insert barbed fitting (1) tightly into the filling line by hand. [L1]
  - ↻ Fill filling syringe (2) with MAGURA *Royal Blood*.
  - ↻ Make sure that there is no air in the filling syringe and filling line.
  - ↻ Pull the piston of the bleeding syringe (3) out as far as the stop.
  - ⇒ Piston base is above bleed bore (4).
- ① If your bleeding syringe does not have the bleed bore, you can make it yourself – the easiest way is to use a Ø 2 mm drill bit for wood or metal.

## MAINTENANCE

- ☞ Make sure that the pressure point adjusting screws (TPA) (1) are unscrewed to the stop (-). [H1]
  - ☞ **HS22** Make sure that the slide (2) (reach adjust) on the brake lever is set to position I. [E2]
  
  - ☞ Push the hose cover (5) upwards. [L3]
  - ☞ Unscrew the screw plug (6) from the filler hole in the brake cylinder.
  - ☞ Screw the barbed fitting of the filling syringe (2) into the filler hole and tighten with tightening torque of **4 Nm (35 lbf-in)** [L3].
  
  - ☞ Unscrew the lower clamping screw of the clamping clip on the brake lever.
  - ☞ **HS11 HS22** Turn the brake lever so it is pointing vertically upwards. [L4]
  - ☞ **HS33** Turn the brake lever so it is pointing horizontally forwards or backwards. [L4]
  - ⇒ The bleed hole is located above the hose inlet.
  - ☞ Tighten the clamping screw slightly.
  
  - ☞ Unscrew the EBT screw (7) from the bleed hole (8). [L4]
  - ☞ Insert the bleeding syringe (3) tightly into the bleed hole. [L5]
  - ☞ Press **MAGURA Royal Blood** slowly out of the filling syringe (2) through the brake system – tap lightly on the brake cylinder and brake lever during this process.
  - ☞ Flick the brake lever 2–3 times.
  - ⇒ This loosens air bubbles and they rise into the bleeding syringe. [L5]
  - ☞ Continue the process until you cannot see any more air bubbles.
  - ⇒ The brake system has been bled.
- NOTICE** Oil loss when removing the bleed syringe.
    - Have a clean cloth at hand.
    - Hold the bleed bore closed before and after pulling off of the bleeding syringe.
    - Hold the bleeding syringe with its point upwards after pulling off, and push in the plunger until just beyond the bleed bore.
    - ☞ Pull the bleeding syringe out of the bleed hole.
    - ☞ Screw the EBT screw (7) into the bleed hole (8) and tighten with tightening torque of **0.5 Nm (4 lbf-in)**. [L4]
    - ⇒ **HS33** The EBT screw fits flush with the housing.
    - ☞ Unscrew the barbed fitting of the filling syringe (2) from the filler hole. [L3]
    - ☞ Screw the screw plug (5) into the filler hole (6) and tighten with tightening torque of **4 Nm (35 lbf-in)**. [L3]
    - ☞ Thoroughly clean up any oil residues on any surfaces – particularly on brake track areas and brake pads.
    - ☞ Pull and hold brake lever.
    - ☞ Make sure that all connections are tight.
  
  - ☞ Move the brake lever into the customary position and secure – see **INSTALLING BRAKE LEVER**, page 16.
  - ☞ **HS22** Move the brake lever to the customary position (reach) – see **Adjusting brake levers (reach adjust)**, page 19.
  - ☞ Set the pressure point – see **SETTING PRESSURE POINT/COMPENSATING FOR PAD WEAR**, page 20.

## THE RULES

### LIABILITY

Wear – including from normal use – is not covered by the liability. The liability is invalidated if the product is no longer used as intended. The intended use also includes complying with all our instructions relating to installation, operation and maintenance in this owner's manual.

The statutory liability provisions apply.

Please contact your retailer regarding the handling of any liability claims!

A liability claim can only be processed if accompanied by a purchase receipt from the retailer.

The validity of a liability claim will be significantly impaired by:

- incorrect use,
- incorrect maintenance,
- damage attributable to falling,
- use of non-genuine MAGURA spare parts,
- use of non-genuine MAGURA hydraulic fluids,
- modification to the surface (e.g. painting ...),
- modification to the structure (e.g. drilling holes ...),
- removing the serial number or rendering it illegible,
- damage in transit or loss.

### WARRANTY

- ① For information about the 5-year leak-tightness warranty, refer to [www.magura.com](http://www.magura.com)



## THE RULES

We at the MAGURA company work continuously on improving our products in conjunction with ongoing technical development.

For this reason, we reserve the right to introduce modifications which differ from the illustrations and descriptions in this owner's manual.

No claims for modifications of products which have already been delivered can be derived from these circumstances.

For current information, see **[www.magura.com](http://www.magura.com)**

Technical dimensions and weight information are subject to the corresponding usual tolerances.

This owner's manual is not allowed to be reprinted or translated, either in whole or in part, without the written approval of MAGURA.

All rights under copyright regulations are reserved.





① Unsere weltweiten Handelspartner und Service Center finden Sie unter [www.magura.com](http://www.magura.com)

① Check out our worldwide partners and service centers at [www.magura.com](http://www.magura.com)

### **Deutschland**

MAGURA Bike Parts GmbH & Co. KG  
Eckisstraße 6  
D-72574 Bad Urach

phone +49 71 25 96 94 6-0  
fax +49 71 25 96 94 6-17  
[info@magura.de](mailto:info@magura.de)

### **Asia**

MAGURA Asia Limited Co.  
No. 9, Industrial Park, 10<sup>th</sup> Road  
Taichung City  
40755 Taichung City, Taiwan

phone +886 4 2359 8555  
fax +886 4 2359 99 10  
[info@magura.com.tw](mailto:info@magura.com.tw)

### **USA**

MAGURA USA  
724 West Clem  
62450 Olney, Illinois

phone +1 618 395-2200  
fax +1 618 395-4711  
[magura@magurausa.com](mailto:magura@magurausa.com)

© MAGURA 2016

All rights reserved

Printed in Germany

2 600 323 – 05-2016

Umschlag & Inhalt:

[www.technische-redaktion.de](http://www.technische-redaktion.de)